

# Data Set

## Geotab Integrated Solution for Ford Vehicles

Data Attribute	Name in MyGeotab UI	Device Plan: Ford Premium (most data reported every 30 seconds)	Device Plan: Ford Basic (data reported only at Ignition ON, OFF or after 24 hours of inactivity)
Ignition Status *	Ignition *	✓	✓
GPS Location (lat, long)	GPS Coordinates	✓	✓
Odometer (from ECM)	Odometer	✓	✓
Tire Pressure - Front Left	Tire pressure - front left	✓	✓
Tire Pressure - Front Right	Tire pressure - front right	✓	✓
Tire Pressure - Rear Left	Tire pressure - rear left	✓	✓
Tire Pressure - Rear Right	Tire pressure - rear right	✓	✓
Accident Event (Fault) *	ALERT: Accident limit for acceleration exceeded	✓	✓
ABS Active Status	Generic ABS active	✓	✗
Acceleration (m/s <sup>2</sup> ) *	Acceleration forward or braking *	✓	✗
Acceleration side (m/s <sup>2</sup> ) *	Acceleration side to side *	✓	✗
Acceleration Pedal Position	Accelerator pedal position	✓	✗
Battery Voltage	Telematics device voltage	✓	✗
Brake Pedal Status	Brake pedal on	✓	✗
Engine Coolant Temperature	Engine coolant temperature	✓	✗
Engine Speed (RPM)	Engine speed	✓	✗
Engine Oil Temperature *	Engine oil temperature *	✓	✗
Fuel Level Remaining	Fuel level (percentage)	✓	✗
Total Fuel Used (Beta)	Total fuel used (since telematics device install)	✓	✗
Total Idle Fuel Used (Beta)	Total fuel used while idling (since telematics device install)	✓	✗
Gear Lever Position *	Gear position *	✓	✗
GPS Speed (Speed)	Engine road speed	✓	✗



Oil Life Remaining (Percentage)	Engine oil life remaining	✓	✗
Passenger Occupancy Status	Passenger occupancy	✓	✗
Seatbelt Status - Passenger *	Passenger seatbelt violation *	✓	✗
Seatbelt Status - Driver *	Driver seat belt *	✓	✗
Total Engine Time *	Engine operational time *	✓	✗
Total Engine Idle Time *	Total engine idle time *	✓	✗
Traction Control Status *	Traction control system enabled *	✓	✗
Misc - Faults / DTCs	Corresponding Fault Code / DTC	✓	✗
Check Engine Light	Fault: General vehicle warning light is on	✓	✗

\*Data reporting varies. Please refer to the Data description section below.

## Data Description

### Accident Event

Reported if any of the below conditions is met:

- The reported acceleration exceeds 2.6G
- Ford detects an accident via vehicle sensors

### Acceleration

- Forward acceleration (Hard Acceleration): Reported every 30 seconds and also when acceleration remains above 0.41G (4 m/s<sup>2</sup>) for 2 seconds
- Backward acceleration (Harsh Braking): Reported every 30 seconds and also when acceleration remains below -0.31G (3 m/s<sup>2</sup>) for 2 seconds
- Side to side acceleration (Harsh Cornering): Reported every 30 seconds and also accompanied when harsh braking or acceleration event occurs

### ABS Active Status

- 0 - Off
- 1 - On

### Brake Pedal Status

- 0 - Off
- 1 - On

### Gear Lever Position

This data point is available only on vehicles with automatic transmission.

- Negative Numbers - REVERSE Gears
- Positive Numbers - FORWARD Gears
- 0 - NEUTRAL



- 126 - PARK
- 127 - DRIVE
- Reported on gear changes (event basis)

### Engine Oil Temperature

This data point is available only on select vehicles fitted with an engine oil temperature sensor

### Ignition Status

- 0 - Off
- 1 - On
- Reported only when the ignition state changes (event basis)

### Passenger Occupancy Status

- 0 - Unoccupied
- 1 - Occupied

### Road Speed

- Reported every 30 seconds
- Also reported whenever vehicle speed is greater than 137kph for 10s or more

### Seatbelt Status

- 0 - Buckled
- 1 - Unbuckled
- Reported every 30 seconds and also when the seatbelt is unbuckled when vehicle has been moving at 5 kmph for 3 seconds

### Traction Control Status

- 0 - Off
- 1 - On

### Total Engine Time / Total Engine Idle Time / Traction Control Status

- Data reported on occurrence of ignition off and only on select Trucks / Commercial models:

Model
F-150, F-250, F-350, F-450
F-550, F-650, F-750
Explorer U625 S2 Police
Fusion CD391N M2 Police
Continental D544 M3.1 Livery

### [Frequently Asked Questions](#)

